



SitePath Walkway Matting



Industrial Flooring

 Light Duty

Description

A high-visibility and industrial walkway solution perfect for use within factories and screeded construction site floors.

The lightweight matting solution has been designed with reduced trip potential in mind through its low profile and diamond pattern top surface. SitePath Walkway Matting has been manufactured with a flexible material that can be laid onto uneven surfaces, making it ideal for external walkways and unprepared floors.

Guide price

£114.00 (excl. VAT)

*We advise checking any agreed or pre-authorised disclaimers on our website before installing or using any of our products, along with live updated and discounted prices available.

- ✓ Low profile to reduce trip potential
- ✓ Easily cleaned with a jet washer or hose
- ✓ Operating temperature of -20°C to +70°C
- ✓ REACH compliant



We won't be beaten on price - find it cheaper and we'll beat it!

Specifications

 Size	Full size: 10m [L] x 1.0m [W] x 2mm [H] Half size: 5m [L] x 1.0m [W] x 2mm [H] Supplied in long rolls
 Weight	28Kg / 14Kg
 Handholes/connection holes	N/A
 Surface	Top: Non-slip diamond pattern surface Bottom: Smooth surface
 Material	Polyvinyl Chloride (PVC)
 Colour	Hi-visibility yellow

SitePath Walkway Matting requires no specialist lifting or knowledge and is supplied in long rolls to enable a fast and easy installation.

The matting is generally resistant to chemicals, making it long-lasting and is REACH compliant (Registration, Authorisation and Restriction of Chemicals) to help protect human health and the environment from chemical hazards.



Contact us to find out about products available for hire and finance.

Step 1



Step 2



Step 3



Step 4




[Download MultiMatts Brochure](#)

How to install the SitePath Walkway Matting



Preparation

Ensure there are no objects along the ground as this may cause bumps and an uneven layer of flooring.

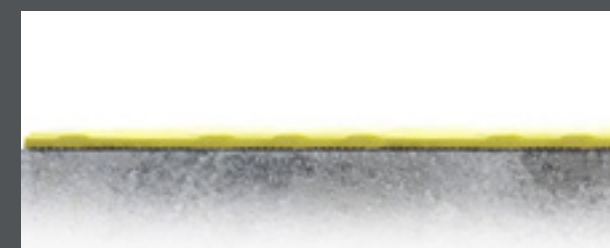

Installation

Simply roll the matting out and secure to the ground. This product can be laid loose or adhered to the ground, so please do what you see fit when securing into place. Double sided tape or adhesive may be required for more permanent fixings.



Connection

Having installed the roll of matting, line up the next roll next to or beside the first - ensure there are no gaps or overlapping.