



# Tuff Spun Anti-fatigue Matting



Industrial Flooring

Light Duty

## Description

An anti-fatigue matting solution intended for light industrial and commercial use in dry, indoor conditions. Tuff Spun is available in different sizes and various foam thickness.

Tuff Spun Anti-fatigue Matting has been designed for workers providing a safe, comfortable and anti-fatigue surface to stand on. It's an all rubber silicone free roll construction with a homogenous closed cell foam, that is REACH compliant, as a great budget option for employees comfort in the workplace.

Guide price

**£136.95** (excl. VAT)

\*We advise checking any agreed or pre-authorized disclaimers on our website before installing or using any of our products, along with live updated and discounted prices available.

**LOWEST PRICES** We won't be beaten on price - find it cheaper and we'll beat it!

- ✓ Reduces standing fatigue and noise
- ✓ Industrial sponge construction
- ✓ Slip resistant and certified wear resistant
- ✓ Protects against damage from dropped items


## Specifications

Size	Standard: 600mm / 1500mm / 3000mm [L] x 910mm [W] x 9mm [H] Wear Heavy Duty: 600mm / 1500mm / 3000mm [L] x 910mm [W] x 14mm [H]
Weight	3.3Kg per m <sup>2</sup>
Compression	ASTM 4060: 0.75g loss
Surface	Top: Textured non-slip surface Bottom: Noise reduction non-slip surface
Material	Polyvinyl Chloride (PVC) foam
Colour	Grey or black with yellow edge

The Tuff Spun range is comprised of Tuff Spun Anti-fatigue Matting and Tuff Spun Wear Heavy Duty Anti-fatigue Matting.

The mats are finished with a ribbed vinyl top surface for added traction, abrasion, and puncture resistance. They lay loose on the floor, yet stable underfoot and at the base of a workbench, and also reduce noise and prevents impact damage to accidentally dropped items.

TuffSpun Wear Heavy Duty Anti-fatigue Matting has an increased foam thickness of almost 50%.

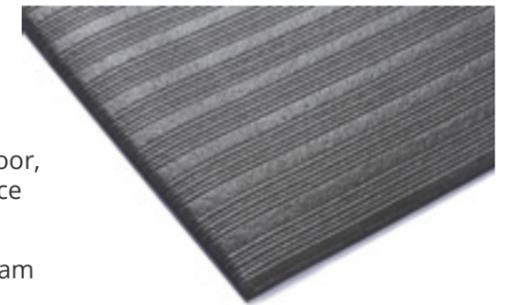

Contact us to find out about products available for hire and finance.




[Download MultiMatts Brochure](#)


## How to install the Tuff Spun Anti-fatigue Matting



**Preparation**  
Ensure that the area is clean and dry before installing the Tuff Spun matting. Measure the area that you need filled.

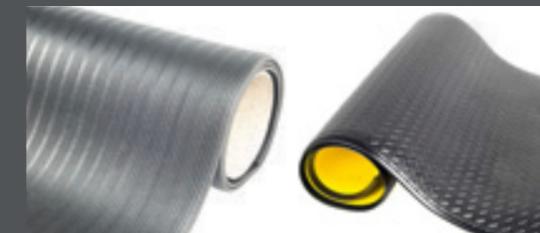

**Installation**  
There is no requirement for specialist skills or tools. Tuff Spun mats come in rolls or modules for quick installation and application with snug fit against work stations. If required, mats can be cut to size and shape.

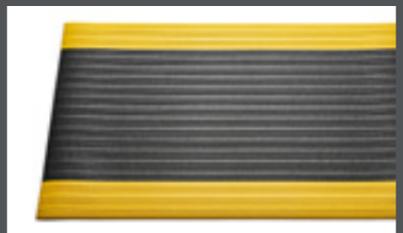

**Connection**  
Unroll the mat and use foot or hand pressure to lay them tightly together, then repeat the process. Edging and tracks can be fitted as an additional safety feature.